THE SHARPER IMAGE®

8x Lighted Travel Mirror

CA808 Instructions

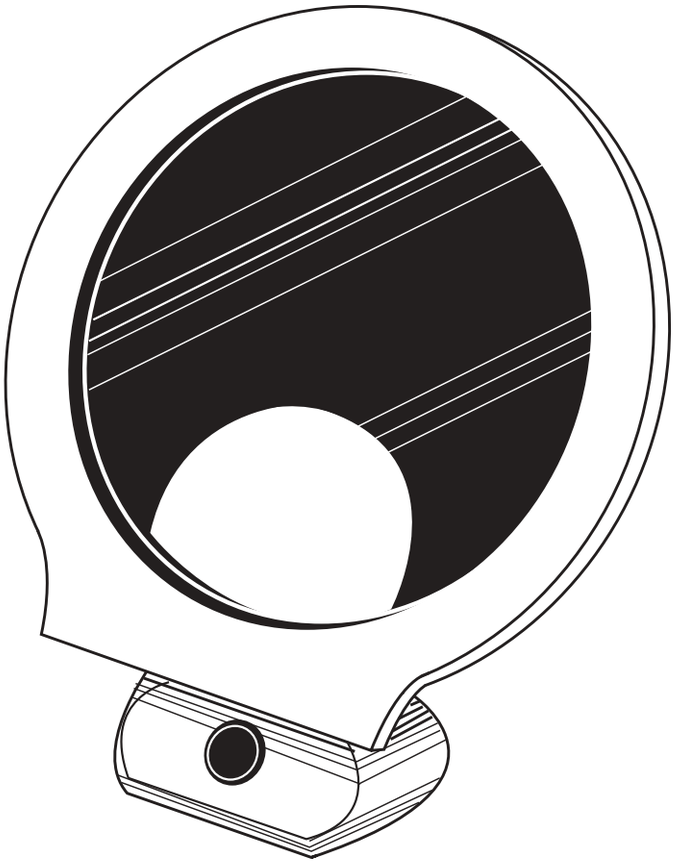

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life easier and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer
Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service, or go to www.sharperimage.com*, our complete online store.*

IMPORTANT SAFETY INSTRUCTIONS

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE. WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING:

WARNING - To reduce the risk of burns, electrocution, fire or injury to persons:

1. Read all instructions before using the product.
2. To protect against electrical hazards, do not use while bathing or in the shower.
3. Close supervision is necessary when any product is used by or near children or invalids.
4. Unplug the product from outlet when not in use or before cleaning. Do not leave product unattended when it is plugged in. Keep cord away from heated surfaces.
5. Do not operate this product with a damaged cord or plug, or if the product malfunctions or has been dropped or damaged in any manner. Return appliance to place of purchase. No repairs should be attempted by the customer.
6. Use product only for intended use as described in this instruction manual. The use of attachments not recommended or sold by the manufacturer may cause hazards.

IMPORTANT SAFETY INSTRUCTIONS

7. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
8. Be sure mirror is not in a position where it can reflect sunlight; reflected sunlight can cause fire.
9. Do not use on a soft surface such as a bed where the openings can be blocked.
10. Turn the switch to the “OFF” position and unplug the cord before replacing light bulbs.
11. Do not place or store the product where it can fall or be pulled into a tub or sink.
12. Do not place in or drop into water or other liquid.
13. If the product falls into water, unplug it immediately. Do not reach into the water.

Use with any 120-volt 60-hertz AC electrical outlet (ordinary household current). Do not use with any other electrical outlet.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU’RE WRONG.

KEEP AWAY FROM WATER.

IMPORTANT SAFETY INSTRUCTIONS

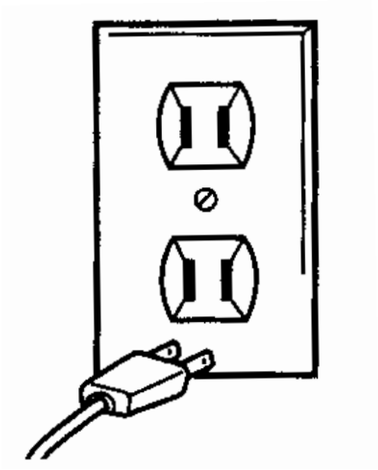

Everybody knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES.

Public Service AD from Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

SAVE THESE INSTRUCTIONS.

Quick Start

Using the Adapter

1. Plug the adapter into any standard wall outlet (120V AC).
2. Turn the **ON/OFF** switch to the **ON** position.

Using Batteries

1. Remove the battery cover from the bottom of the unit.
2. Install 4 new AA batteries, observing proper +/- polarities, as indicated in the battery compartment. (For an illustration, see "Operating Instructions.")
3. Replace the battery cover and lock into position.
4. Turn the **ON/OFF** switch to the **ON** position.

Adjusting Mirror

To adjust the angle of the mirror, carefully move the mirror head until the desired position has been reached.

Operating Instructions

The 8x Lighted Mirror is 5" in diameter with 8x magnification. This unit operates on 4 AA batteries (purchase separately) or plugs in with the adapter (included).

Using the Adapter

1. Plug into any standard wall outlet (120V AC).
2. Turn the **ON/OFF** switch to the **ON** position.
3. After use, always turn the **ON/OFF** switch to the **OFF** position and unplug the adapter from the wall outlet.
4. If you choose to store the mirror, see “Storage” section for detailed information.

Installing Batteries

1. Remove the battery cover from the bottom of the unit.
2. Install 4 new AA batteries, observing proper +/- polarities, as indicated in the battery compartment. (See Fig. 1.)
3. Replace the battery cover and lock into position.
4. Turn the **ON/OFF** switch to the **ON** position.

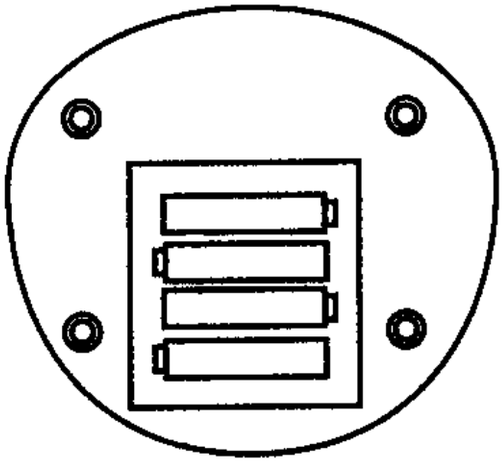

Figure 1

Replacing Bulb

CAUTION: TURN OFF THE POWER AND UNPLUG. ALLOW BULB TO COOL AT LEAST THREE MINUTES BEFORE REPLACING IT.

NOTE: Do not use bulbs other than those supplied by The Sharper Image. Contact one of our customer service representatives at 1-800-344-5555 for replacement bulb information.

1. Twist off the mirror head from the base. (See Fig. 2.)
2. Remove old bulb.
3. Replace with new bulb.
4. Reconnect the mirror head to the base.

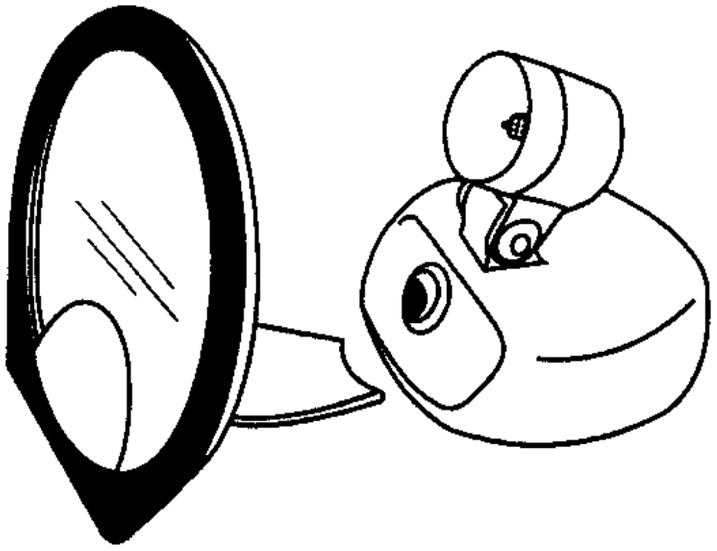

Figure 2

AC Adapter

NOTE: UNIT SUPPLIED WITH A UL-LISTED ADAPTER.

Maintenance

The 8x Lighted Travel Mirror is designed for household use and is virtually maintenance-free. No lubrication is needed.

If cleaning becomes necessary, disconnect the appliance from the power source and wipe exterior with a damp cloth. Clean mirror surfaces with a glass cleaner.

If any abnormal condition occurs, unplug the lighted mirror, allow it to cool and return it to the place of purchase with your sales receipt.

Storage

Disconnect from the electrical outlet to reduce the risk of fire.

BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MAGNIFYING SIDE OF MIRROR WHEN LEFT UNATTENDED.

Allow to cool to room temperature before storing. Place in a cool, dry area out of reach of children.

Storage

Once the mirror is disconnected from the base, a convenient drawstring pouch is provided to store the mirror and prevent it from being scratched.

Handle cord carefully for longer product life. Do not jerk or strain at plug connections or wrap cord around mirror for storage. This could cause a short circuit or damage to the cord. To store mirror, coil cord loosely.

WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V1 04/03